

ESCADA

2H / 2HDATE / 3H / 3HDATE
INSTRUCTION MANUAL



SCAN QR CODE FOR
GLOBAL SERVICE CENTER
DETAILS

ABOUT ESCADA

Step into the unique world of ESCADA timepieces - where every creation is a bold expression of style, strength, and modern femininity. Meticulously crafted and unmistakably luxurious, each timepiece echoes ESCADA's iconic codes with a contemporary twist. Turning every moment into a statement of confidence and glamour.

INTERNATIONAL WARRANTY

Your ESCADA timepiece is protected by a two-year international warranty, valid from the original date of purchase. This warranty covers any material or manufacturing defects under normal use.

COVERED UNDER WARRANTY:

- Movement
- Hands
- Dial
- Encased components

In case of a defect during the warranty period, your timepiece will either be repaired or replaced free of charge, at the discretion of the authorized service center or ESCADA dealer.

TO CLAIM YOUR WARRANTY:

- Purchase from an authorized retailer
- Retain your warranty card or proof of purchase

NOT COVERED UNDER WARRANTY

- Battery
- Case exterior
- Glass
- Straps or bracelets (including buckles/clasps)
- Water damage to leather straps
- Damage from accidents, mishandling, or wear and tear

WARRANTY VOID IF

- Timepiece is opened or repaired by unauthorized parties
- Damage is caused by misuse or external factors

SERVICE

- For any service needs, return your timepiece with the purchase receipt and warranty card to an authorized service center
- A replacement timepiece may be provided if repair is not possible, but a matching model is not guaranteed
- Warranty for a replacement expires 24 months from the date of replacement

NON-WARRANTY SERVICES

For services not covered under the warranty, charges will apply based on the model and type of repair. Pricing may vary.

SHIPPING & RETURNS

We recommend insuring and carefully packaging your timepiece when shipping. ESCADA is not liable for loss or damage in transit.

CARE INSTRUCTIONS



To ensure your ESCADA timepiece lasts for years, please follow these care guidelines:

- Clean your timepiece with a soft, dry cloth to remove dirt or moisture.
- Avoid chemicals like soap, detergent, cosmetics, or perfumes that may damage the case or strap.
- Secure the crown after adjusting the time to prevent moisture damage.
- Protect your timepiece from drops to avoid scratches or internal damage.



- Store your timepiece separately in a box to prevent friction damage.
- Replace used batteries immediately to prevent leakage damage.
- Always use authorized service centers for repairs.

With proper care, your ESCADA timepiece will remain a stunning, timeless accessory.



FRANÇAIS

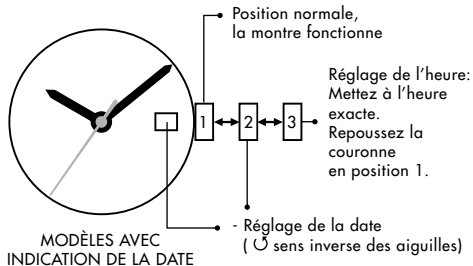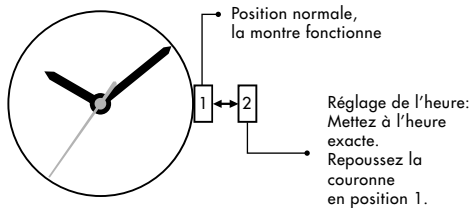



ENGLISH

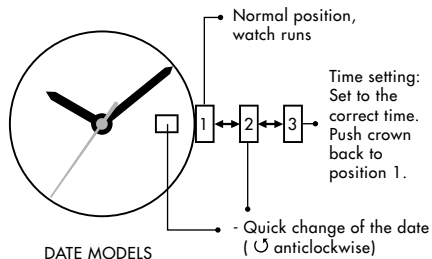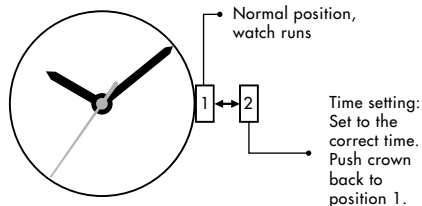



DEUTSCH

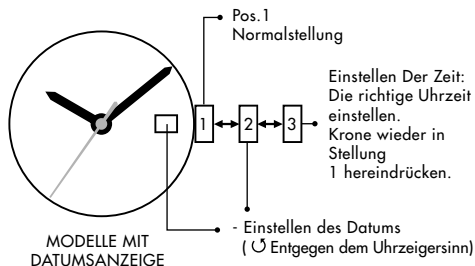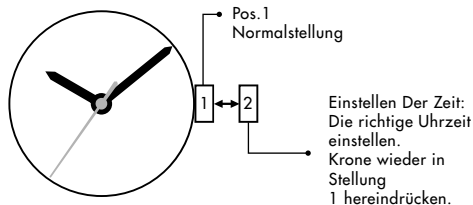  



ITALIANO

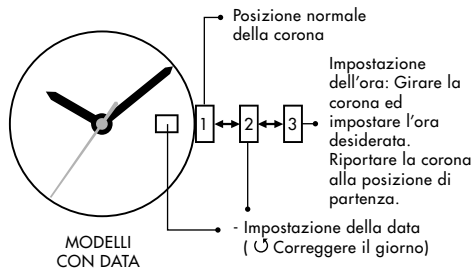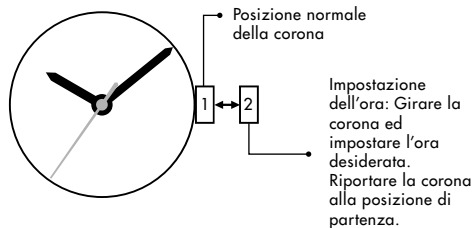  



ESPAÑOL

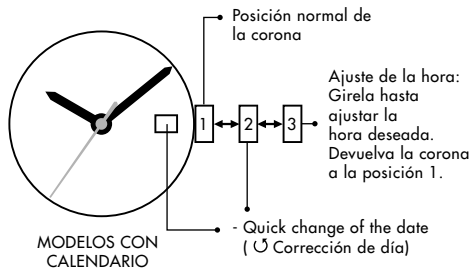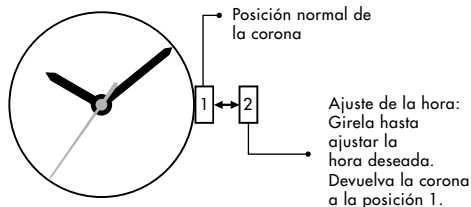  



ARABIC

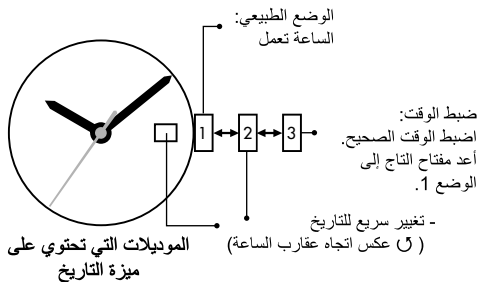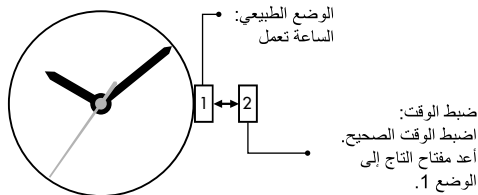  



JAPANESE

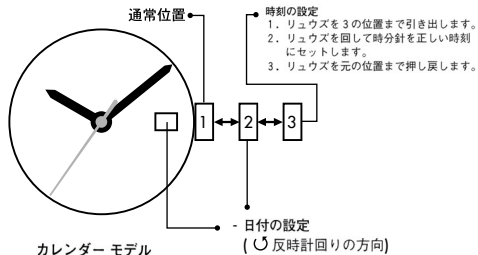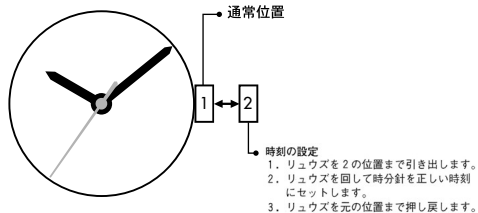  

SIMPLIFIED CHINESE

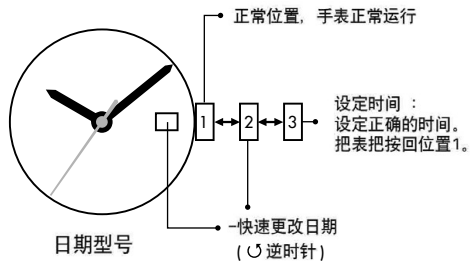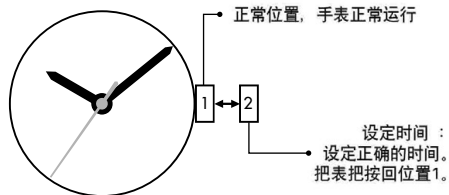  

RUSSIAN

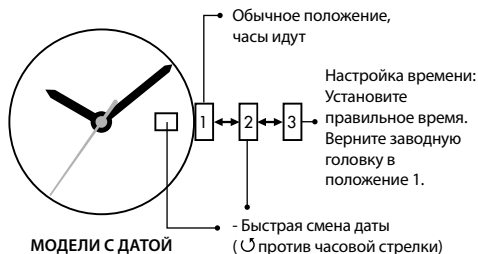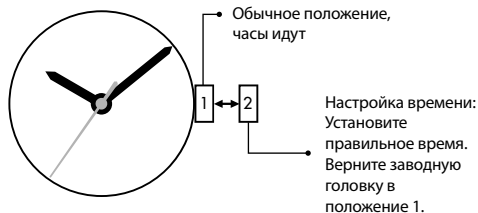  

WATER RESISTANCE LEVEL

Without any water-resistant marking					
3 ATM / 30m					
5 ATM / 50m					
10 ATM / 100m					
20 ATM / 200m					

- Always set the crown in the normal position / Tighten screw-lock crown completely.
- Riposizionare sempre la corona in posizione normale / Stringere completamente la corona a vite.
- Die Krone nach Handhabungen immer auf die Normalposition zurückdrücken und niemals unter Wasser herausziehen. Schraubkronen: nach jeder Handhabung die Krone unbedingt wieder festschrauben.
- La couronne doit toujours être en position normale / Serrer à fond la vis de blocage de la couronne.
- Coloque la corona en su posición habitual / Apriete por completo el cierre de la corona.
- リュウズは常に通常位置に設定してください。ネジ込み式リュウズは完全に閉めた状態で着用してください。
- 务必把表把设定在正常位置/完全扭紧螺丝锁入式表把。
- Всегда возвращайте заводную головку в исходное положение./ Затягивайте винтовой стопор до упора.
- When the watch is underwater or wet, never use the pushers/ bezels, or set the time. Watch cases and metal bracelets should be rinsed thoroughly in fresh water after being in salt water.
- Non utilizzare mai pulsanti/ corone né impostare l'ora quando l'orologio è sott'acqua a bagnato. Si consiglia di sciacquare con acqua di rubinetto cassa e bracciale dell'orologio nel caso in cui siano stati immersi in acqua salata.

- Betätigen Sie niemals die Druckknöpfe/ Einstellringe und stellen Sie niemals die Zeit ein, wenn sich die Uhr unter Wasser befindet oder naß ist. Uhrengehäuse und Metallambänder sollten, nachdem sie Salzwasser ausgesetzt waren, gründlich abgespült werden.
- Quand la montre est sous l'eau ou qu'elle est mouillée, n'actionnez jamais les boutons ou la couronne, ne réglez pas l'heure. Il est recommandé de rincer abondamment la montre à l'eau courante si les boîtiers et les bracelets métalliques ont été au contact de l'eau de mer.
- Cuando el reloj esté bajo el agua o se encuentre mojado, nunca oprima los botones ni ajuste la hora. Los relojes y brazaletes de metal deberán enjuagarse con abundante agua del grifo después de usarse en agua salada.
- 水中ではボタン操作、時刻合わせ、ベゼルの回転させるなどの動作は行わないでください。また時計が塩水に浸かった場合は使用後、必ず真水ですすいでください。風呂、サウナ内での着用、および放置はお避けください。高温と湿度(水分)が組合わさることにより防水機能に支障が生じる場合があります。
- 当手表在水中或沾湿时，切勿使用按的或表圈，或设定时间。表壳和金属表带接触海水后，应用清水彻底洗干净。
- Если часы находятся в воде или в мокром состоянии, никогда не нажимайте на кнопки, не вращайте безель и не устанавливайте время. После использования часов в солёной воде часовую камеру и металлический браслет необходимо промыть пресной водой.

EU Product Responsibility & Technical Support

ILG Germany GmbH

Otto-Filiz-Str. 9,

DE-83324 Ruppolding

T +49 (0) 861 21 39 72 0

info@interluxury.de / www.interluxury.de



www.quefaireedemesdechets.fr

